


Voron Design

How to measure and set Vref on your stepper drivers.

Written By: insurgus

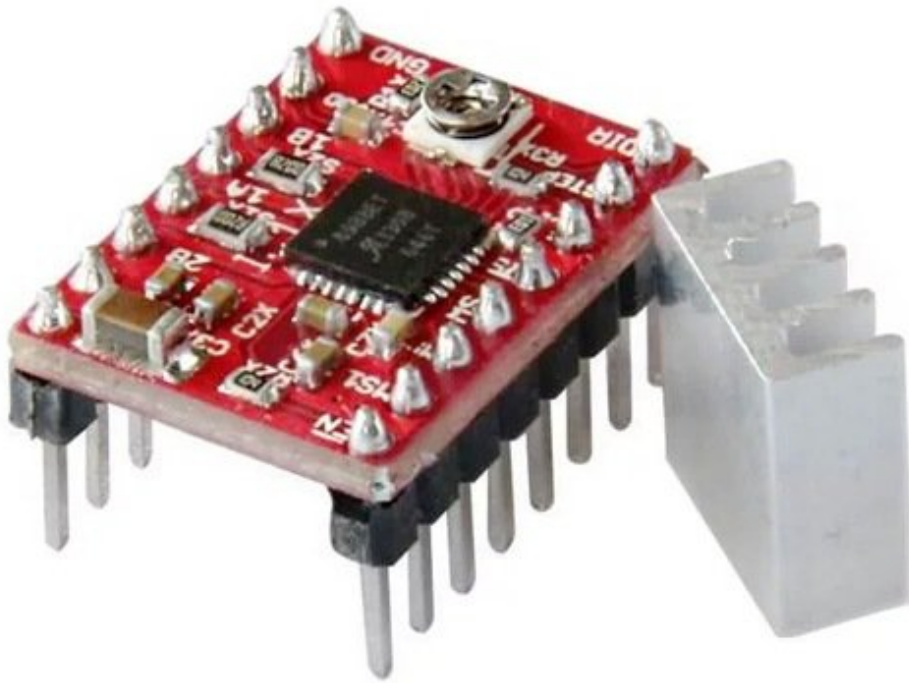



TOOLS:

- [Precision Screwdriver Set](#) (1)
- [Multimeter](#) (1)

