Voron Design

14 - Attach Panels/Extruder

Written By: ArmyAg08






Allen Key Set (1)



PARTS:

- M3x8 SHCS (21)
- M3x10 SHCS (8)
- M5x10 BHCS (1)
- M5x12 (2)
- Bowden Tube (1)


Step 1 — Attach Back Panel

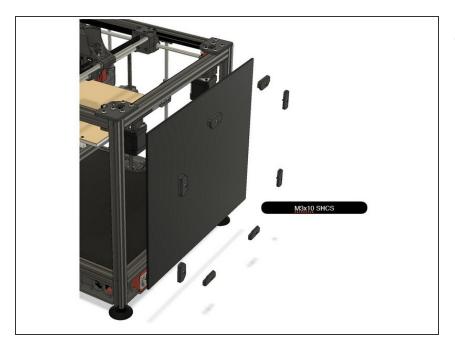

Insert wisdom here.


Step 2 — Attach Side Panels



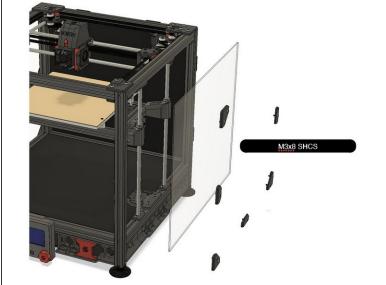

Insert wisdom here.

Step 3 — Attach Extruder

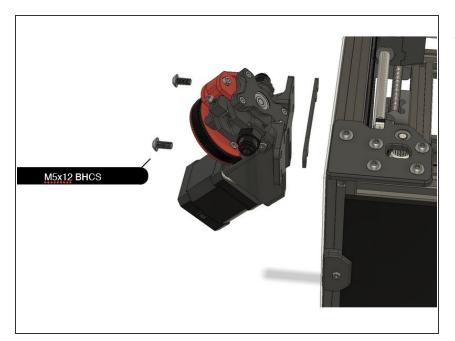


Insert wisdom here.

Step 4 — **Attach Spool Holder**



Insert wisdom here.

Step 5 — Attach Bowden Tube

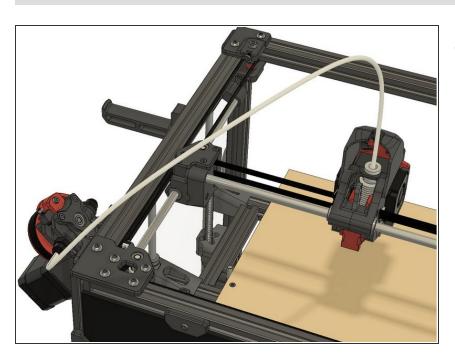

Insert wisdom here.